

Controls PLAYBACK of live and recorded TV... Used in the program guide for PAGE and DAY navigation... Displays main cable MENU... Shows current menu and returns to current program... Displays program GUIDE... Controls and MUTES TV VOLUME...

Used to cycle through video inputs on TV or Audio Receiver... Used to enter remote control SETUP... Accesses ON DEMAND program library... Displays a LIST of recorded programs... Displays INFO for currently selected program... Returns to LAST channel you were watching...

Getting Started

Primeros Pasos

Note/Nota: Make sure all home theater equipment is ON before starting remote control setup. Asegúrese de que todo el equipo de cine en casa (home theater) esté ENCENDIDO (ON) antes de comenzar la configuración del control remoto.

1 Remove battery cover. Retire la tapa del compartimiento de pilas.

2 Insert 2 AA batteries. Match the + and - marks. Coloque 2 pilas AA. Haga coincidir las marcas "+" y "-".

3 Replace battery cover. Vuelva a colocar la tapa del compartimiento de pilas.

Tip/Consejo: The Mode Key will blink 5 times with each key-press when batteries need replacement. La tecla de Modo parpadeará 5 veces con cada pulsación de tecla cuando sea necesario reemplazar las pilas.

 
Setup Method B:

Configuración - Método B:


1 Press the TV mode key. Presione la tecla de modo TV.



2 Press and hold SETUP until the TV mode key blinks twice. Presione y mantenga presionada la tecla SET UP (Configurar) hasta que el modo TV parpadee dos veces.

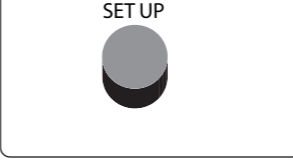

 3 Enter the 1st TV code for your TV brand from the code list. Ingrese el primer código de TV que corresponda a la marca de su TV de la lista de códigos.

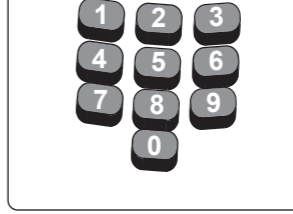

4 Press the power button to test TV control. If the TV turns off, setup is complete. Presione el botón de encendido/apagado para probar el control del Televisor. Si el televisor se apaga, la configuración se ha completado.



5 If the TV does not turn off, repeat the process using the next code for your TV brand. Si el televisor no se apaga, repita el proceso utilizando el próximo código para la marca de su TV.



Setup TV Control Using Direct Code Entry

Configuración del Control de TV utilizando Entrada Directa de Código

Codes: TV

Table listing TV codes for various brands like Accurion, Action, Admiral, Advent, Aiiko, Aiwa, Akai, Akura, Albatron, Alfide, America Action, Anam, AOC, Aomni, Apex Digital, Astar, Audinac, Audiovox, Aventura, Axion, Baysonic, Bell & Howell, BenQ, BGH, Blue Sky, Boigle, Bradford, Brilliant, Broksonic, Byd:sign, Candie, Carnivale, Carver, Casio, CCE, Celebrity, Celera, Champion, Changhong, Cineal, Cincial, Citizen, Clarion, Coby, Commercial Solutions, Concerto, Conia, Contec, Continental, Coradir, Craig, Cromax, Crosley, Crown, Crown Mustang, Curtis, Curtis Mathes, CXC, Cytron, Daenyx, Daewoo, Daytron, Dell, Denon, Diamond Vision, Digistar, Disney, Drean, DSE, Dumont, Durabrand, Dynex, Electrobond, Electrograph, Electrohome, Elektra, Element, Emerson, Emprex, Encross, Envision.

Table listing TV codes for brands like Epson, Funai, Futuretech, GE, General Electric, GFM, Gibraltar, Global Home, Go Video, GoldStar, Gradiente, Grundig, Grunpy, H & B, Haier, Hallmark, Hanns.G, Hannspree, Harley Davidsson, Harman/Kardon, Havermy, Helios, Hello Kitty, Hewlett Packard, Himitsu, Hisense, Hitachi, Hitech, HP, Hyundai, I-inc, ilo, Infinity, Initial, Innova, Insignia, Inteq, IRT, ITT Nokia, IXX, JBL, JCB, JCM, Jensen, JVC, KDC, KEC, Ken Brown, Kenia, Kenwood, Kioto, KLH, Konka, Kost, Kreisen, KTV, LG, Lloyd's, Loewe, Luxman, LXI, Lynx, M&S, MAG, Magnavox, Marantz, Matsushita, Maxent.


Table listing TV codes for brands like Megatron, Memorex, MGA, Midland, Mintek, Mitsubishi, Monivision, Motorola, MTC, Multitech, Mx Onda, NAD, Naxa, NEC, Netsat, NetTV, NEX, Nexus Electronics, Nikko, Nimbro, Noblex, Nokia, Norcent, Norwood Micro, NTC, Nu-Tec, NuVision, Olevia, Onwa, Optimus, Optoma, Optonica, Orion, Otic, Packard Bell, Panasonic, Panavox, PARK, Penney, Pettters, Philco, Philips, Pioneer, Planar, Polaroid, Portland, Precision, Prima, Prism, Proscan, Proton, Proview, Pulsar, Punktal, Pye, Pyle, Quasar, RadioShack, RCA.

Table listing TV codes for brands like Scotch, Scott, Sears, Semivox, Semp, Sense, Serie Dorada, Sharp, Sheng Chia, Sherwood, Siam, Signet, Signature, SKY, Skyworth, Sole, Sony, Soundesign, Sovo, Soyo, Space Tek, Spectroniq, Squareview, SSS, Starlite, Studio Experience, SunBriteTV, Superscan, Supersonic, Supreme, SVA, Sylvania, Symphonic, Syntax, Tahochi, Talent, Tandy, Tatung, TCL, Technics, Techwood, Teknika, Telefunken, Thomas, TMI, TNCI, Tophouse, Toshiba, TruTech, TVS, US Logic, Vector Research, VENTURER, VECTOS, Victor, Vidikron, Vidtech, Viewsonic, Viore, Visart, Vizio, Wards, Waycon, Westinghouse, White Westinghouse, Winco, Wyse, Xion, Yamaha, Zenith.


Configuración - Método A:

Marcas famosas

 
1 Press and hold SETUP until the mode key blinks twice. Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.

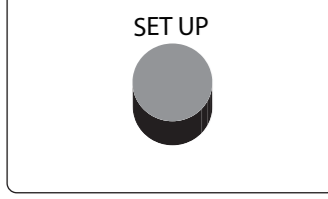

 2 Press the mode key for device you wish to setup. The mode key stays lit. Presione la tecla de modo para el equipo que desee configurar. La tecla de modo permanece encendida.

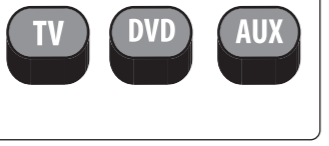

 3 Find your device and brand from the charts below and note the DIGIT key assigned to your brand. Press and hold down the DIGIT key for your device/brand. Busque su equipo y marca en las tablas que figuran a continuación y observe el código de DÍGITO (Digit) asignado a su marca. Presione y mantenga presionada la tecla DIGIT (DÍGITO) que corresponda a su equipo/marca.

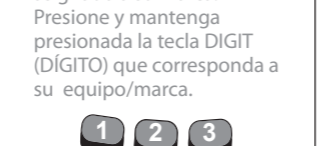

4 Let go of the key when your device turns off. Setup for that device is complete. Suelte la tecla cuando su equipo se apague. La configuración para ese equipo se ha completado.

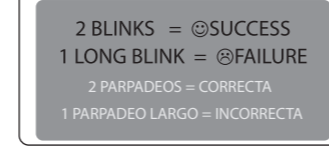 


Table mapping DIGIT (0-9) to TV brands: 1 Insignia / Dynex, 2 LG / Zenith, 3 Mitsubishi, 4 Panasonic, 5 Philips / Magnavox, 6 Samsung, 7 Sharp, 8 Sony, 9 Toshiba, 0 Vizio.

Table mapping DIGIT (0-9) to DVD/VCR brands: 1 Insignia / Dynex, 2 LG, 3 Panasonic, 4 Philips / Magnavox, 5 RCA, 6 Samsung, 7 Sharp, 8 Sony, 9 Sylvania, 0 Toshiba.

Table mapping DIGIT (0-9) to Audio brands: 1 Bose, 2 Denon, 3 LG, 4 Onkyo, 5 Panasonic, 6 Philips, 7 Pioneer, 8 Samsung, 9 Sony, 0 Yamaha.

